





SpeechLine IS microphone series


Microphone solutions for your conference | meeting room presentation





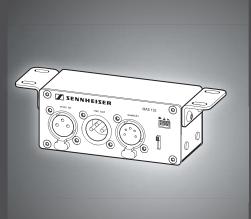

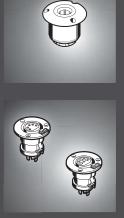

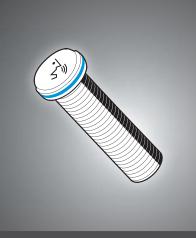



Instruction manual

Contents

Important safety information	2
Sennheiser SpeechLine – True to the word	
Typical applications	
Typical ways of setting up and installing microphones	
Pick-up patterns of the microphones Positioning the microphones	
Typical acoustic situations	
Overview of the SpeechLine IS microphone series	
Package contents Package contents of the microphones microphone heads	
Package contents of the	10
tables stands floors stands microphone mounts	11
Package contents of the inline switch box microphone button	
Product overview	
Overview of the MEB 114 (-S) boundary layer microphones	
Overview of the MEB 102 (-L) MEB 104 (-L)	
surface-mounted boundary layer microphones	13
Overview of the MEG 14-40 (-L(-II)) gooseneck microphones	
Overview of the MZH 30xx (-L) goosenecks	
Overview of the MAT 133 (-S) MAT 153-S table stands	
Overview of the MAS 133 inline switch box	
Overview of the MAS 1 microphone button	
Overview of the MZFS 60 MZFS 80 microphone stands	
Mounting and installing the products Planning the position of surface-mounted products	
Mounting surface-mounted boundary layer microphones,	10
microphone buttons, switch boxes: table lectern	18
Mounting the gooseneck microphones: table lectern stand	
Mounting microphones to the ceiling	
Positioning mobile microphones	
	20
Connecting the products	
Connecting the products Connecting the products to an audio input	26
v 1	26 26
Connecting the products to an audio input Connecting products via the logic function	26 26 28
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity	26 26 28 31 31
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S)	26 26 28 31 31 31
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S) Setting the behavior of the microphone button	26 28 31 31 31 32
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S)	26 28 31 31 31 32
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S) Setting the behavior of the microphone button Activating/muting microphones Cleaning and maintaining the products	26 28 31 31 31 32 33 33 34
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S) Setting the behavior of the microphone button Activating/muting microphones Cleaning and maintaining the products Specifications	26 28 31 31 31 32 33 34 35
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S) Setting the behavior of the microphone button Activating/muting microphones Cleaning and maintaining the products Specifications Product specifications	26 28 31 31 32 33 33 34 35
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S) Setting the behavior of the microphone button Activating/muting microphones Cleaning and maintaining the products Specifications Product specifications Pin assignment	26 28 31 31 32 33 34 35 35 40
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S) Setting the behavior of the microphone button Activating/muting microphones Cleaning and maintaining the products Specifications Product specifications Pin assignment Polar diagrams	26 26 28 31 31 31 32 33 34 35 40 41
Connecting the products to an audio input Connecting products via the logic function Adjusting and using the products Adjusting the microphone sensitivity Activating/deactivating the low-cut filter on the MEB 114 (-S) Setting the behavior of the microphone button Activating/muting microphones Cleaning and maintaining the products Specifications Product specifications Pin assignment	26 28 31 31 32 33 34 35 35 40 41 43

Important safety information



- Please read this instruction manual carefully and completely before using the products.
- Always include this instruction manual when passing the products on to third parties.
- Do not use obviously defective products.

Preventing damage to health and accidents

- Position and install the products so that any risk of injury to the user is eliminated.
- Keep the products, accessories and packaging parts out of reach of children and pets to prevent accidents and choking hazards.

Preventing damage to the product and malfunctions

- Always keep the products dry and do not expose it to extreme temperatures (hairdryer, heater, extended exposure to sunlight, etc.) to avoid corrosion or deformation.
- Only clean the products with a soft, dry cloth. Solvents or cleansing agents can damage the surfaces of the products.
- Only use the products within the specifications indicated (see page 35).
- Only use attachments/ accessories/ spare parts supplied or recommended by Sennheiser.
- Before operation, make sure that all connected third party devices are in a safe operating condition and function properly.

Intended use/Liability

The products of the "IS microphone series" are designed for use in meeting rooms, conference rooms and auditoriums. Some of these products can be combined with each other.

The products can be used for commercial purposes.

It is considered improper use when the products are used for any application not named in the corresponding manuals.

Sennheiser does not accept liability for damage arising from abuse or misuse of the products and their attachments/accessories.

Sennheiser SpeechLine – True to the word

The spoken word remains the most personal and powerful tool in communication. It enables us to convey and exchange messages, thoughts and opinions, as well as emotions. Therefore, when using technical devices like microphones, it is most important that no content is lost or misunderstood.

The best microphone is one you don't have to think about while speaking, because it fully captures your voice and picks up your words as precisely as you form them. Easy operation and clear speech intelligibility are perhaps most popularly embodied in the characteristically shaped Sennheiser ME 36, which can be seen on virtually every TV news program.

The qualities of these iconic microphones can also be found in all other microphones of the versatile Sennheiser SpeechLine series. These qualities are also built into any microphone of the versatile Sennheiser SpeechLine portfolio.

Wired or wireless, digital or analog, this comprehensive range of easy to integrate and unobtrusively designed microphones offer a solution for just about any situation, including yours.

In many applications, a speech microphone can help to increase the speech intelligibility or even make it possible in the first place (as in teleconferences). The following chapters describe the most common applications.

Typical applications

A) Conferences (voice lift)

The larger the room, the more helpful is an audio system which enhances the speech intelligibility. Especially in large conference rooms, a speaker seated at one end is difficult to understand at the other end. Table or ceiling microphones can be used to pick up what the speaker says. The audio signal can then be spread evenly around the room using wall or ceiling loudspeakers. This application is also known as "voice lift", i.e. the speech is amplified in the room.

B) Teleconferences

If the participants of a conference are seated in different rooms, they have to be connected via telephone or remote conference circuit. As a telephone alone can only offer inadequate speech transmission for all participants in the room, table or ceiling microphones should be used in this case too. These are connected to a telephone conference unit such as the Sennheiser TeamConnect system. This processes the signals and establishes the connection to the remote participant.

C) Presentations

Especially in a presentation, in which the focus is on the transmission of content, it is important to understand every word. Here, too, the larger the room, the more necessary it is to amplify the voice. In this case, gooseneck microphones offer the speaker orientation and enhance his presentation.





Typical ways of setting up and installing microphones

Mobile microphones:



Permanently installed microphones:



A) Table

Especially in conference rooms, an obvious solution is miking up the table. Here all participants are seated around the table. Sennheiser offers mobile solutions as well as permanently installed microphones. The mobile microphones are simply placed on the table.

Mobile installation:

Permanent installation:






B) Ceiling



Suspending a microphone from the ceiling is another alternative. It has the advantage that the microphones can be installed virtually invisibly in the room. Ceiling installation requires precise prior planning, as the microphones are further away from the speaker and the speech intelligibility can be impaired by noise coming from the ventilator of a projector or from an air conditioning unit.

C) Lectern

A lectern is usually used for presentations. Here, too, the microphones can be positioned temporarily or installed permanently. A gooseneck microphone positions the microphone capsule close to the speaker, thus ensuring maximum speech intelligibility. Flexible gooseneck microphones prevent conflicts with laptops because they can be oriented flexibly.

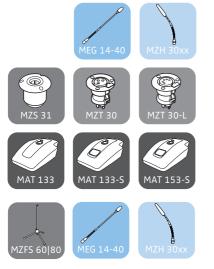

D) Floor

For spontaneous presentations or panel discussions, floor stands provide a solid base for a gooseneck microphone.

Pick-up patterns of the microphones

Omni-directional pick-up pattern

An omni-directional pattern picks up the sound uniformly from all directions.

Cardioid pick-up pattern

A cardioid pattern has a wide directional characteristic, i.e. a wide opening angle. Sound hitting the rear of the microphone is attenuated very strongly.

Super-cardioid pick-up pattern

A super-cardioid pattern has a slightly stronger directional characteristic than the cardioid pattern, so it suppresses noise coming from the side even more strongly but also picks up some of the sound coming from the rear.



MFB 104-

Super-cardioid | lobar pick-up pattern

A super-cardioid or lobar pattern has the strongest directional characteristic, i.e. it provides the maximum suppression of sound coming from the side, but it also picks up sound coming from the rear. However, the ratio is lower than it is with the super-cardioid pattern.

Positioning the microphones

A) Distance from the speaker

Basically, the nearer a speaker is to the microphone, the higher the speech intelligibility. For this reason, gooseneck microphones are optimal from an acoustic point of view. They position the microphone capsule close to the speaker while offering excellent orientation.

Boundary layer microphones do not achieve the excellent acoustic characteristics of gooseneck microphones, but they can be positioned especially unobtrusively. These microphones can be integrated into any room due to their small size and the colors they are available in. As a result of the so-called boundary layer effect, the signal picked up by the microphone capsule is amplified on a surface (for example a table or a ceiling panel). In this way, part of the distance to the speaker can be compensated for again.

B) One microphone for each speaker

In the ideal case, a dedicated microphone is used for each speaker. This allows the best possible orientation and distance to the speaker to be ensured at all times. It is also possible to choose a narrower directional characteristic. This allows noise coming from the side as well as acoustic reflections to be minimized, resulting in the highest speech intelligibility.

C) "Shared microphones" - several speakers share one microphone

One microphone per speaker is ideal, but one microphone shared by two speakers is often adequate for many applications. A microphone with a sufficiently wide opening angle should be selected here. The microphone can thus pick up both speakers if installed centrally before them.



D) Typical table shapes - U-shaped, round, long, rows

Depending on the configuration of the tables in a room, different microphones can be selected. In the case of a small round table, for example, a microphone with an omni-directional pick-up pattern (shown as a blue circle) is adequate to pick up all participants uniformly. Directional microphones (shown as a semicircle) are suitable for rows of tables. These microphones minimize the sound coming from the rear and the sides. In oblong conference rooms with long tables, a combination of directional and omni-directional microphones can be a good solution.

E) Speaker is seated

For conferences in which the speakers are seated, planning is easy as the distance between the speaker and the microphone is easy to estimate or measure. Here, the microphone is simply placed on the table and oriented towards the speaker.



F) Speaker is standing

In the case of presentations held at a lectern, the speaker is usually in a standing position. Here, the distance between lectern and mouth is virtually as large as it is with a seated speaker. In courtrooms, the speakers frequently stand up although the table in front of them is often of "normal" height. In this case, long gooseneck microphones should be used ideally in order to reduce the distance between the microphone capsule and the speaker.

Typical acoustic situations

A) Normally attenuated room

A normally attenuated room provides an average attenuation of reflections. This is contributed to by carpets, curtains or special acoustic ceilings. In the case of reduced reflections in the room, microphones pick up less noise, which results in the highest speech intelligibility.

B) Room with amplified sound


If the speech in the room is amplified by loudspeakers, this signal can enter the microphone again. This can cause echo, but in the worst case acoustic feedback can be the result. The effect can be reduced by using microphones with stronger directional characteristics.

C) Large rooms with echo – acoustically challenging rooms

The larger the room, the more probable is acoustic disturbance due to reflections or sound coming from loudspeakers. If the room also has many smooth surfaces such as glass fronts or smooth floors, the result is a scenario which is extremely unfavorable acoustically. In this case, only microphones with strong directional characteristics like the ME 36 can ensure speech intelligibility.

Overview of the SpeechLine IS microphone series

The SpeechLine IS microphone series offers microphones for different room and speech situations (with speakers in a standing or sitting position). Depending on the application, the microphones can be permanently mounted into tables or lecterns, mounted to the ceiling or simply set up somewhere.

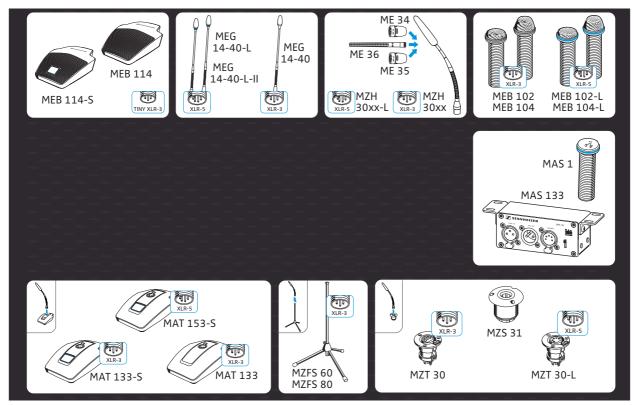

The series comprise the following products:

Microphone with XLR-5 connection	Microphone with XLR-3 connection
Boundary layer microphones signal light ring:MEB 102-LMEB 104-L	Boundary layer microphones:MEB 114 with microphone button: MEB 114-SMEB 102 MEB 104
 Gooseneck microphones with signal light ring: MZH 30xx-L goosenecks: MZH 3015-L, MZH 3040-L, MZH 3042-L, MZH 3062-L, MZH 3072-L with ME 34, ME 35 or ME 36 microphone head MEG 14-40-L, MEG 14-40-L-II gooseneck microphones 	 Gooseneck microphones: MZH 30xx goosenecks: MZH 3015, MZH 3040, MZH 3042, MZH 3062, MZH 3072 with ME 34, ME 35 or ME 36 microphone head MEG 14-40 gooseneck microphone
	MAS 133 inline switch box and MAS 1 microphone button for controlling a microphone
Table stands for gooseneck microphones:	Table stands for gooseneck microphones:
• with microphone button: MAT 153-S	MAT 133 with microphone button: MAT 133-S
Table mounts for gooseneck microphones:MZS 31MZT 30-L	Table mounts for gooseneck microphones:MZS 31MZT 30
Floor stands for gooseneck microphones:	


• MZFS 60 or MZFS 80

Package contents


Depending on the product purchased, the package contents includes different components. The letters A), B) etc. stand for alternative package components.

MEB 114 | MEB 114-S MZH 30xx(-L) A) MEB 114-S Quick Guide Quick Guide Safety Guide OR B) MEB 114 B) MZH 30xx (-L) OR A) MZH 30xx MEG 14-40(-L(-II)) ME 34| ME 35 | ME 36 B) ME 35 A) ME 34 A) + B) MZW 34 Quick Guide Safety Guide OR OR OR OR C) ME 36 C) MEG 14-40-L-II C) MZW 36 A) MEG 14-40 B) MEG 14-40-L MEB 102 | MEB 102-L | MEB 104 | MEB 104-L A) MEB 102 B) MEB 102-L Ouick Guide

Package contents of the microphones | microphone heads

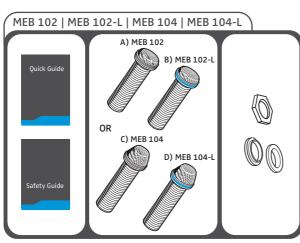




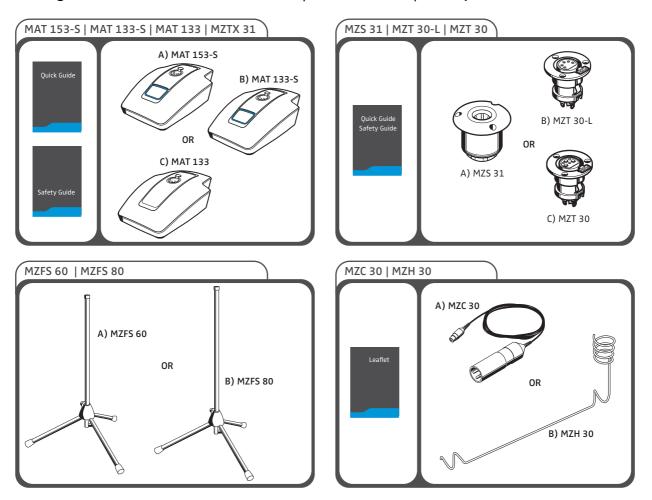

Package contents of the tables stands | floors stands | microphone mounts

Package contents of the inline switch box | microphone button

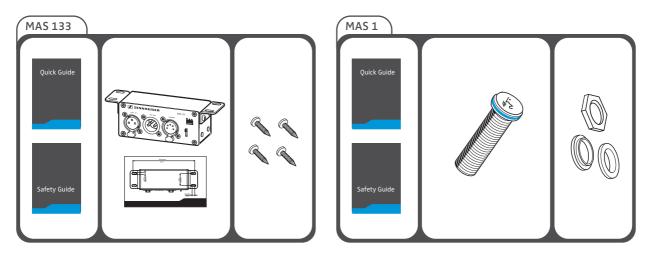


For more information on the complete SpeechLine IS microphone series and for the data sheets of the individual components, please visit our website at www.sennheiser.com. For information on suppliers, contact your local Sennheiser partner: www.sennheiser.com > "Service & Support"

Product overview

The pin assignment of the products can be found on page 40.


Overview of the MEB 114 (-S) boundary layer microphones

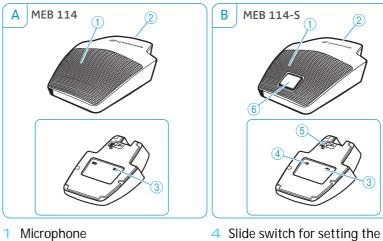

- 2 TINY-XLR-3 socket
- 3 Low cut filter


- behavior of the microphone button
- 5 Logic port
- 6 Microphone button with signal light ring (red/green)

Overview of the MEB 102 (-L) | MEB 104 (-L) surface-mounted boundary layer microphones

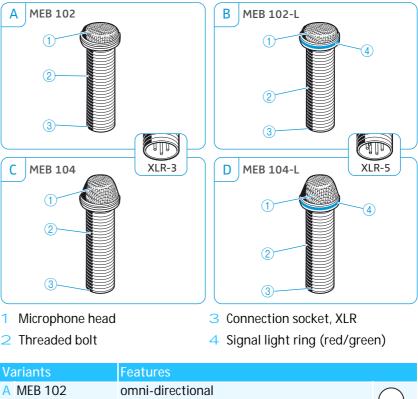

Va	riants	Features	
А	MEB 102	omni-directional	\bigcirc
В	MEB 102-L	omni-directional, with signal light ring	\bigcirc
С	MEB 104	cardioid, acoustically directional	\bigcirc
D	MEB 104-L	cardioid, acoustically directional, with signal light ring	\bigcirc


Overview of the MEG 14-40 (-L(-II)) gooseneck microphones

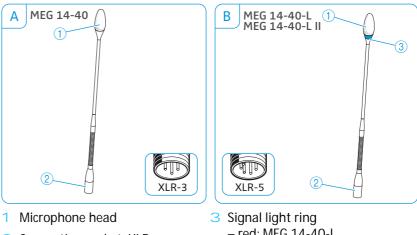


- 2 Connection socket, XLR
- red: MEG 14-40-L
- green: MEG 14-40-L II

Va	ariant	Features	
А	MEG 14-40	cardioid, acoustically directional	\bigcirc
В	• •	cardioid, acoustically directional, with signal light ring	\bigcirc

Overview of the MZH 30xx (-L) goosenecks

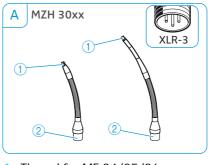


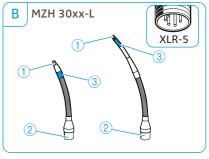

- 1 Thread for ME 34/35/36 microphone heads
- 2 Connection socket, XLR
- 3 Signal light ring (red/green)

Microphone head	Features	
ME 34	cardioid, acoustically directional	\bigcirc
ME 35	super-cardioid, acoustically directional	\bigcirc
ME 36	super-cardioid/lobar, acoustically directional	Q


Overview of the MAT 133 (-S) | MAT 153-S table stands

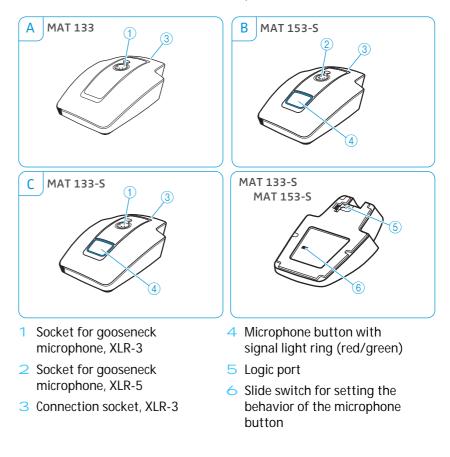


(\mathbf{f}) 😟 🗷 SENNHEISER ٢ 4 Mounting brackets 1 4 switch socket for MAS 1 microphone button, XLR-5F 2 mic in microphone input, 5 Slide switch for setting the XLR-3F behavior of the microphone 3 mic out microphone output, button XLR-3M 6 logic out output

Overview of the MAS 133 inline switch box

Overview of the MAS 1 microphone button

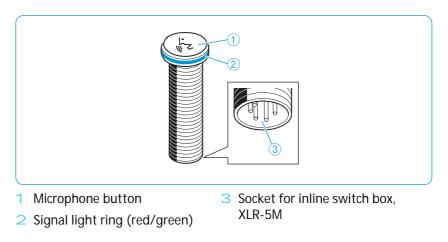

Overview of the MZFS 60 | MZFS 80 microphone stands

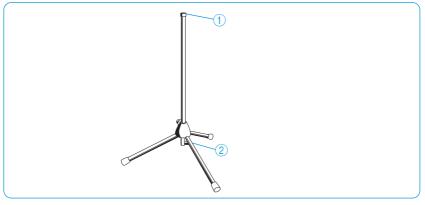

1 Microphone connection, XLR-3F 2 Connection socket, XLR-3M


Mounting and installing the products


Planning the position of surface-mounted products

Planning the position of surface-mounted microphones | microphone buttons | inline switch boxes on tables and lecterns




- Choose the positions of surface-mounted microphones, microphone buttons, table mounts, shock mounts and inline switch boxes on e.g. lecterns or conference tables so that
- the speakers don't hit their knees when sitting down,
- the distance between speaker and microphone is between 30 cm to 80 cm (best possible speech quality),
- the microphone buttons are easy to reach for the speakers and
- no disruptive objects, sources of disturbance (e.g. telephones or PC fans) or movable parts are in close proximity to the microphones.

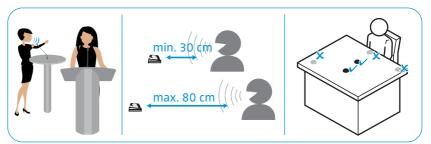

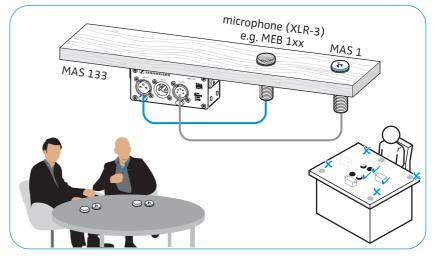




Planning the position of microphones | microphones accessories on a ceiling

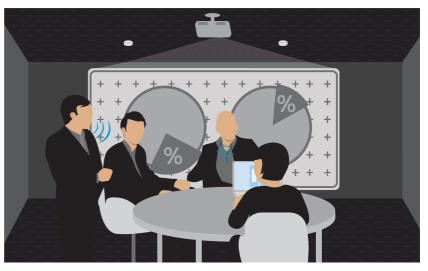

To mount the product to a ceiling panel or wooden board:

- Choose the positions of the microphones or flush mounts on the ceiling so that
 - they are located directly above or in close proximity to the speaker,
 - neither the speaker nor other persons can hit their heads on the microphones or can get caught in hanging cables.
- When ceiling mounting, observe the applicable fire protection requirements for the building.

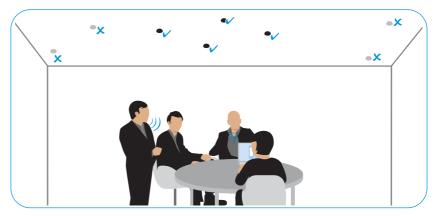




Mounting surface-mounted boundary layer microphones, microphone buttons, switch boxes: table | lectern

Drilling a hole through the surface of the table or lectern


Once you have chosen a position for the product (see page 16):


Drill a hole with a diameter of 25 mm through the mounting surface (plate thickness: 10 mm - 65 mm).

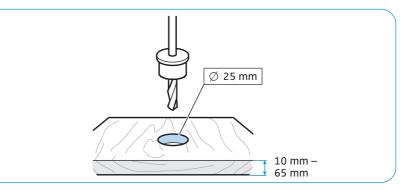

Mounting the MEB 102 (-L) | MEB 104 (-L) boundary layer microphones

- Slide the first rubber ring over the threaded bolt of the microphone and 1 then insert the microphone into the drilled hole.
- 2 Orient the MEB 104 and MEB 104-L microphones towards the speaker. Slide the second rubber ring over the threaded bolt and tighten the hex nut.

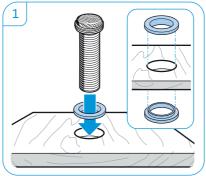


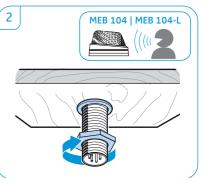


Mounting the MAS 1 microphone button Slide the first rubber ring over the threaded bolt of the microphone 1



button and then insert the microphone into the drilled hole. 2 Slide the second rubber ring over the threaded bolt and tighten the hex nut.

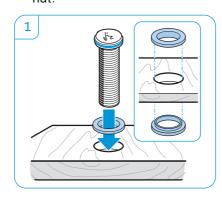


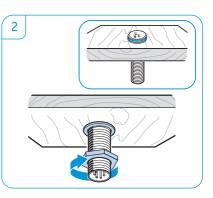







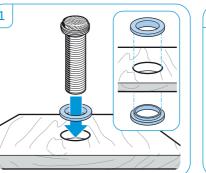


Mounting the MAS 133 inline switch box



If necessary, change the position of the mounting brackets by loosening the screws and removing the covers from the drilled holes. Attach the mounting brackets to the desired position and replace the covers.


- Use the drilling template (see supplement) to mark the position of the screws.
- > Attach the inline switch box using the supplied recessed head screws.

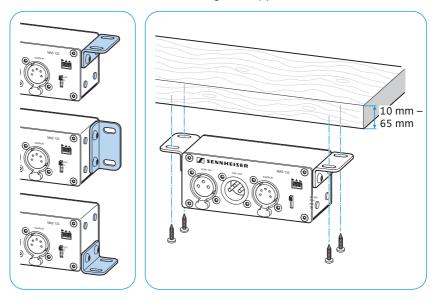

Mounting the gooseneck microphones: table | lectern | stand

You can mount the gooseneck microphones:


- A) to mobile table stands,
- B) to floor stands and
- C) to surface-mounted table mounts or shock mounts.

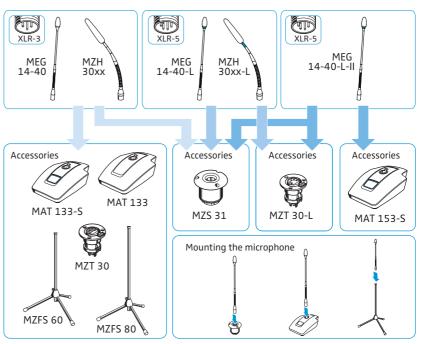

Mounting the ME 3x microphone head onto the MZH gooseneck




Tightly screw one of the microphone heads onto the gooseneck in order to ensure a reliable ground connection.

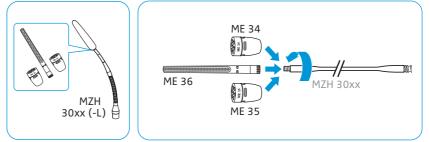

A) Mounting the MEG/MZH gooseneck microphone onto the MAT table stand

- Connect the XLR connector of the gooseneck microphone to the corresponding socket of the table stand.
- Orient the microphone towards the speaker.

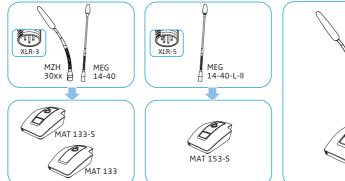




MAT 133-S

MAT 133

MAT 153-5

B) Mounting the MEG/MZH gooseneck microphone to the MZFS floor stand


- MZH 30XX MEG 14-40
- Connect the XLR connector of the gooseneck microphone to the corresponding socket of the floor stand.

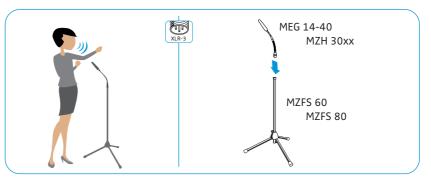


C) Mounting the MEG/MZH gooseneck microphone to the MZT table mount/MZS shock mount

Once you have chosen a position for the product (see page 16):

- 1 Drill a hole with the following diameter through the mounting surface (plate thickness 10 mm 65 mm):
 - 24 mm for the MZT 30 (-L) table mount
 - 51 mm for the MZS 31 shock mount

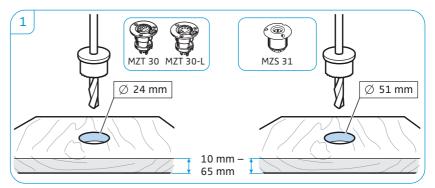


- 2 Insert the table mount or the shock mount into the drilled hole.
- 3 Connect the XLR connector of the gooseneck microphone to the corresponding socket of the MZT 30 (-L) table mount/MZS 31 shock mount.

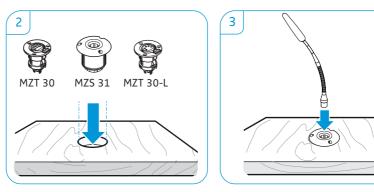



Mounting microphones to the ceiling

Some microphones of the IS series can also be mounted to a ceiling panel or wooden board of a suspended ceiling.

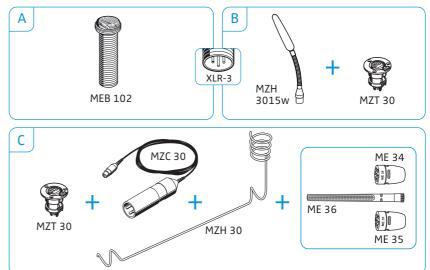





A) Mounting the MEB 102 boundary layer to the ceiling

Once you have chosen a position for the product (see page 16):

Drill a hole with a diameter of 25 mm through the ceiling panel or wooden board (plate thickness 10 mm - 65 mm).

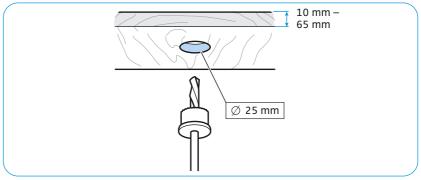

- Slide the first rubber ring over the threaded bolt of the microphone button and then insert the microphone into the drilled hole.
- Slide the second rubber ring over the threaded bolt and tighten the hex nut.

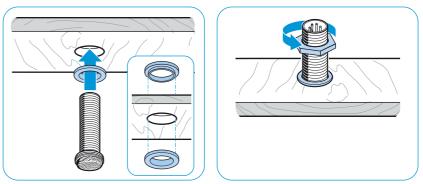


Connect a suitable cable (see page 26) and lay the cable.

ME 34|35|36 MZS 31


B) Mounting the MZH 3015 w gooseneck microphone to the ceiling

Tightly screw one of the microphone heads onto the gooseneck in order to ensure a reliable ground connection.

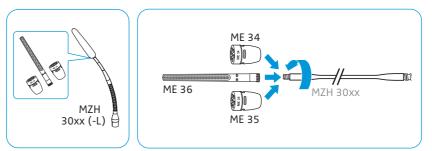


Once you have chosen a position for the product (see page 16):

- Drill a hole with the following diameter through the mounting surface (plate thickness 10 mm - 65 mm):
 - 24 mm for the MZT 30 table mount
 - 51 mm for the MZS 31 shock mount

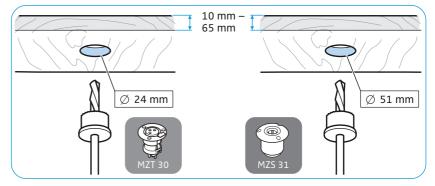


- Insert the table mount or the shock mount into the drilled hole.
- Connect the XLR connector of the gooseneck microphone to the corresponding socket of the MZT 30 table mount/MZS 31 shock mount.

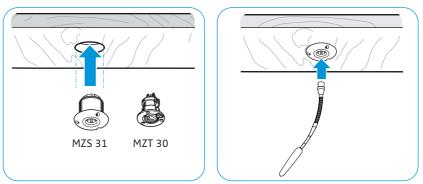


Connect a suitable cable (see page 26) and lay the cable.

 
C) Ceiling-mounting a ME 3x microphone




Drill a hole with a diameter of 24 mm through the mounting surface (plate thickness 10 mm - 65 mm).

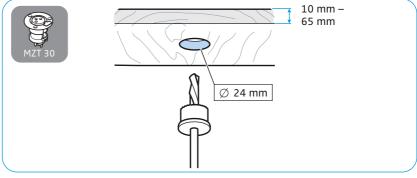

- Insert the table mount into the drilled hole.
- Connect the XLR connector of the MZC 30 cable to the corresponding socket of the MZT 30 table mount.

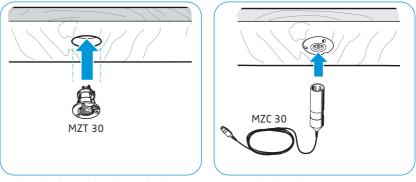

- Guide the cable through the MZH 30 metal ceiling hanger.
- Tightly screw one of the microphone heads onto the special coax socket of the cable in order to ensure a reliable ground connection.

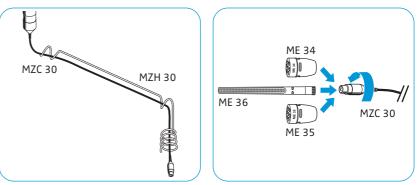

Connect a suitable cable (see page 26) and lay the cable.






Positioning mobile microphones



Positioning tabletop boundary layer microphones/gooseneck microphones attached to a table stand

- Choose the positions of the microphone so that
 - the distance between speaker and microphone is between 30 cm to 80 cm (best possible speech quality) and
 - no disruptive objects, sources of disturbance (e.g. PC fans) or movable parts are in close proximity to the microphones.
- Orient the gooseneck microphones towards the speaker.

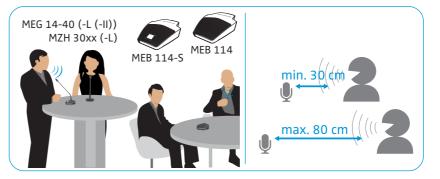


Position the stand with the microphone so that the distance between speaker and microphone is between 30 cm to 80 cm (best possible

Positioning gooseneck microphones attached to a stand



speech quality).Orient the gooseneck microphones towards the speaker.

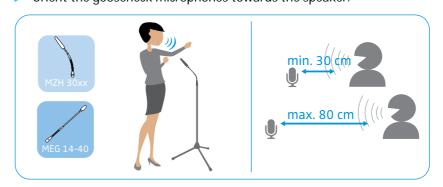



Connecting the products


Connecting the products to an audio input

There are two ways to connect the products of the SpeechLine IS microphone series to a suitable audio input:

- A) Connection to a mixing console, an auto mixer or a digital signal processor (DSP) using shielded cables
- B) Connection to a mixing console via the MAS 133 inline switch box and the MAS 1 microphone button using shielded XLR cables

A) Connecting a microphone to a mixing console | an auto mixer | a digital signal processor (DSP)

- Use a suitable shielded cable (e.g. XLR-XLR, XLR-terminal) to connect the microphone to the mixing console, the auto mixer or the DSP. For more information on the connections, refer to the instruction manual of your DSP.
- Lay all cables in such a way that other persons cannot trip over them and injure themselves.

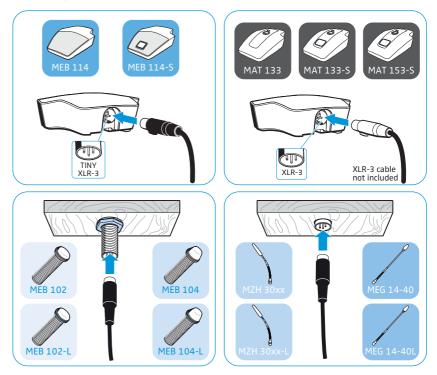



MAT 133-S

102-

MAT 153-9








B) Connecting a microphone | the MAS 133 inline switch box | the MAS 1 microphone button to a mixing console

- Use a shielded XLR-3 cable to connect the MAS 1 microphone button to the MAS 133 inline switch box (switch socket).
- Use a shielded XLR-3 cable each to connect the MAS 133 inline switch box to:
 - the microphone (MAS 133: mic in socket) and
 - the mixing console (MAS 133: mic out socket).

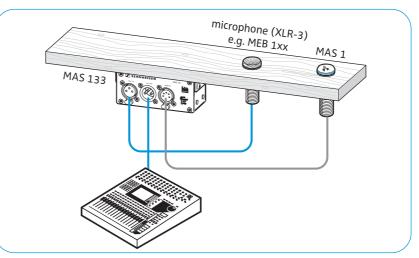

Connecting products via the logic function



Once you have established the audio connection (see previous chapter), you can connect the products of the IS microphone series featuring a logic port (shown on the left) to the DSP.

The logic port passes on status information on the microphone button (microphone button pressed/not pressed) to the DSP. Via the logic output of the DSP, you can additionally control the status of the signal light ring of the microphone button.

The logic output also allows you to integrate and control several MAS 133 inline switch boxes in a system.

The following chapters provide

- A) information on how to connect the MAS 133 inline switch box to a DSP
- B) information on how to connect microphones
- C) an example installation for the Sennheiser TeamConnect system

A) Connecting the MAS 133 inline switch box to the DSP via the logic function



The way you connect the MAS 133 inline switch box determines which information is passed on to the DSP.

Logic port Function




Passes on status information on the microphone button – button pressed/not pressed – to the DSP.



Passes on microphone status information – microphone activated/muted – to the DSP.


- Use a 2-wire cable (Ø 0.14–0.5 mm²) to connect the inline switch box to a GPIO port or logic port of the DSP.
- Lay all cables in such a way that other persons cannot trip over them and injure themselves.
- Observe the connection instructions in the instruction manual of your DSP.

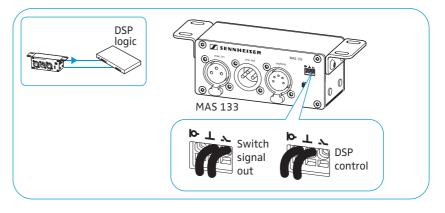

B) Connecting microphones to a DSP with logic function

To establish a logic connection in addition to the audio connection:


- Use a 3-wire cable (Ø 0.14–0.5 mm²) to connect the microphone or the table stand to a GPIO port or logic port of the DSP.
- Lay all cables in such a way that other persons cannot trip over them and injure themselves.
- Observe the connection instructions in the instruction manual of your DSP.

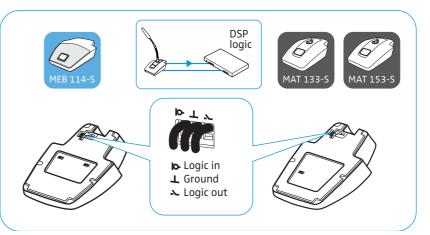





 Set the slide switch for setting the behavior of the microphone button to ON in order to activate the "DSP remote mode".


In "DSP remote mode", the microphone is permanently on and is muted or activated via the DSP. The microphone thus permanently provides a reference signal for AEC algorithms in the DSP.

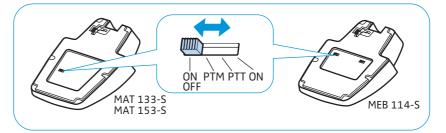




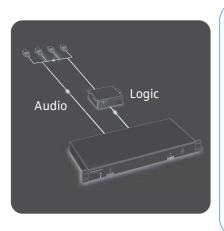

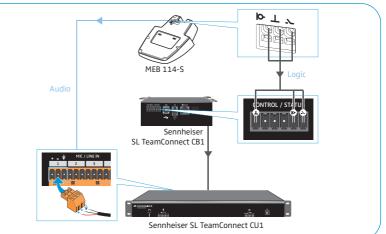

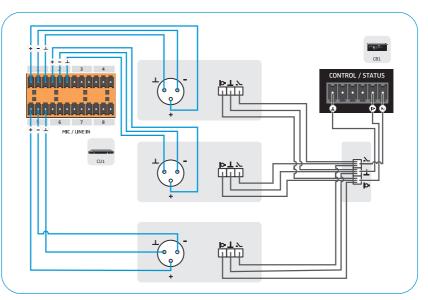

Example installation with an XLR-5 microphone and signal light rings

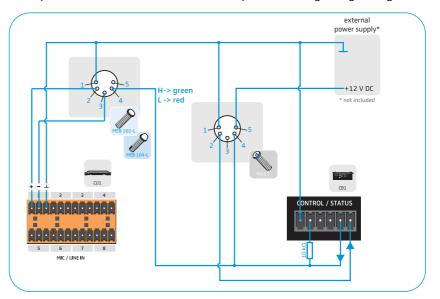

Adjusting and using the products

Adjusting the microphone sensitivity

Use the mixing console, the auto mixer or the DSP to adjust the microphone sensitivity so that over- or under-modulation is avoided. For more information on the audio settings, refer to the instruction manual of the corresponding device.



If interference occurs at high field strengths, remove the source of interference from the microphone.


Activating/deactivating the low-cut filter on the MEB 114 (-S)



A table or lectern transfers the sound produced when a speaker accidentally stumbles against it. The low-cut filter reduces low-frequency noise by filtering out frequencies below 120 Hz.

Set the slide switch to the desired position:



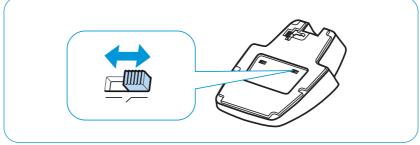


Setting the behavior of the microphone button





The products shown on the left feature a slide switch that allows you to directly set the behavior of the microphone button.

Set the slide switch to the desired position.

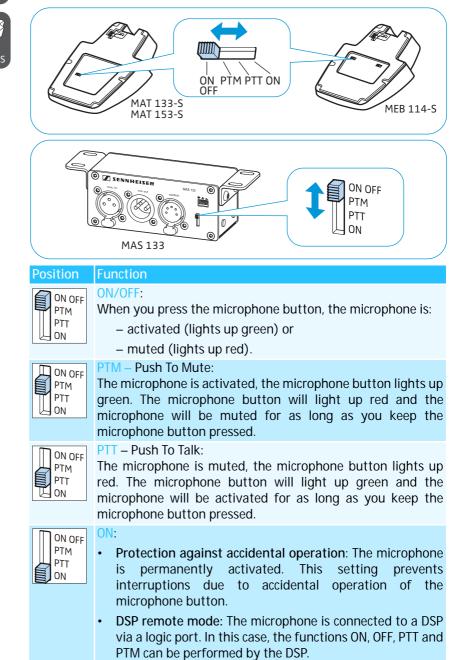

Activating/muting microphones



The products shown on the left have LEDs that indicate whether the microphone is muted or activated. The LEDs light up as soon as the products are powered via the mixing console, the auto mixer or the DSP.

Whether a microphone is permanently activated or muted or whether it can be activated or muted by pressing the microphone button depends on the setting of the slide switch that sets the behavior of the microphone button (see page 32). When the slide switch is set to ON, the microphone is permanently activated and the microphone button is deactivated.

Press the microphone button, the LED lights up:



* This function is not supported by all mixing consoles, auto mixers and DSPs.



The signal light rings of the microphones light up synchronously with the signal light rings of the microphone buttons.

Cleaning and maintaining the products

CAUTION

Liquids can damage the electronics of the products!

Liquids entering the housing of the product can short-circuit the electronics.

- Keep all liquids far away from the product.
- Do not use any solvents or cleansing agents.
- Clean the products with a soft, dry cloth.

Specifications

Product specifications

	MEB 114	MEB 114-5	
Boundary layer microphones	MEB 114	MEB 114-S	
Pick-up pattern	card	bioid	
Frequency response	40 – 20),000 Hz	
Acoustic principle	boundary lay	er microphone	
Switch for behavior of the microphone button	-	ON PTM PTT ON/OFF	
Cut-off frequency	120) Hz	
Output impedance at 1kHz	20	0 Ω	
Sensitivity	10 m	וV/Pa	
Max. sound pressure level	140 dB	at 1 kHz	
Equivalent noise level A-weighted as per DIN IEC 61672	29 dB(A)		
Power supply	24 – 48 V phantom	power (P 24 – P 48)	
Current consumption	1,5 mA	5.3 mA	
		(microphone/signal light ring: 2.65 mA each)	
Logic input	-	high level input voltage > 2.0 V low level input voltage < 0.8 V	
Logic output	-	high level output voltage > 2.4 V low level output voltage < 0.4 V	
Connector	tiny XLR-3M	tiny XLR-3M 3 x terminal	
Weight	approx. 286 g		
Dimensions (W x H x D)	85 mm x 25 r	nm x 100 mm	
emperature operation: -10 °C (14 °F) to +50 °C (122°F) storage: -25 °C (-13°F) to +70 °C (158°F)			

	MEB 102	MEB 102-L	MEB 104	MEB 104-L
Surface-mounted	MEB 102	MEB 102-L	MEB 104	MEB 104-L
boundary layer microphones		irectional	005	dioid
Pick-up pattern Frequency response	UIIIII-U		0,000 Hz	ululu
Acoustic principle			er microphone	
Output impedance at 1kHz		5 5		
Sensitivity	16 r	nV/Pa		nV/Pa
Max. sound pressure level	101		1 kHz < 3%	
Equivalent noise level	21 0	1B (A)		IB (A)
A-weighted as per DIN IEC 61672				
Power supply		24 – 48 V phantom	power (P 24 – P 4	18)
Current consumption	3 mA	6 mA	3 mA	6 mA
		(microphone/		(microphone/
		signal light ring: 3 mA each)		signal light ring:
Connector	XLR-3M	XLR-5M	XLR-3M	3 mA each) XLR-5M
Connector		-	-	-
Weight Dimensions		ox. 59 g ht: approx. 12 mm		ox. 60 g ht: approx. 19 mm
Dimensions	•	approx. 83 mm	-	approx. 90 mm
	total height.	• •	Ŭ	
	Ø microphone head: approx. 29 mm Ø threaded bolt: approx. 20 mm			
			e: M20 x 1.5	
			approx. 23 mm	
Temperature	O	peration: -10 °C (14		2°F)
·		torage: -25 °C (-13		

	MZH 30xx	MZH 30xx-L	
Gooseneck microphones	MZH 30xx	MZH 30xx-L	
Pick-up pattern	depending o	n ME 3x mic head	
Acoustic principle	gooseneck microphone (condenser)		
Power supply	12 V – 48 V		
	phantom po	wer (P 12 – P 48)	
Current consumption	3 mA	18 mA	
		(microphone/signal light ring:	
		9 mA each)	
Connector	XLR-3M	XLR-5M	
Temperature	operation: 0 °C (32 °F) to +40 °C (104 °F) storage: –25 °C (–13°F) to +70 °C (158°F)		

	MEG 14-40	MEG 14-40-L	MEG 14-40-L-II
Gooseneck microphones	MEG 14-40	MEG 14-40-L	MEG 14-40-L-II
Pick-up pattern		cardioid	
Frequency response		50 – 20,000 Hz	
Acoustic principle	goose	neck microphone (conde	enser)
Output impedance at 1kHz		< 100 Ω	
Sensitivity		15 mV/Pa	
Max. sound pressure level	130 dB at 1 kHz < 3%		
Equivalent noise level	37 dB (CCIR)		
	26 dB (A)		
Power supply	12 V – 48 V		
	phantom power (P 12 – P 48)		
Current consumption	3 mA		
Power supply signal light ring	-	9 – 30 V DC	12 – 30 V DC
		approx. 18 mA	1 – 18 mA
		red	green
Connector	XLR-3M	XLR	-5M
Temperature	operation: 0 °C (32 °F) to +40 °C (104 °F) storage: -25 °C (-13°F) to +70 °C (158°F)		

	ME 34	ME 35	ME 36
Microphone heads	ME 34	ME 35	ME 36
Pick-up pattern	cardioid	super-cardioid	hyper-cardioid/lobar
Frequency response	40 – 20.000 Hz	50 – 20.000 Hz	40 – 20.000 Hz
Acoustic principle	pressure gradient transducer	pressure gradient transducer	pressure gradient transducer/ interference tube transducer
Sensitivity	10 m	nV/Pa	18 mV/Pa
Electrical impedance		50Ω	
Min. terminating impedance		1 Ω	
Equivalent noise level	37 dB (CCIR) 26 dB (A)		34 dB (CCIR) 23 dB (A)
Power supply via MZH 30xx	12 V – 4	8 V phantom power (P 12	2 – P 48)
Current consumption microphone		250 µA	
Dimensions (W x H x D)	Ø 12	x L18	Ø 8.2 x L96
Weight without MZH 30xx	9.5 g		17 g
Connector		special coax connector	·
Temperature	operation: –10 °C (14 °F) to +50 °C (122°F) storage: –25 °C (–13°F) to +70 °C (158°F)		. ,

MAS 133 inline switch box



Power supply	48 V phantom power (P48) via MIC IN
Slide switch for setting the behavior of the microphone button	ON PTM PTT ON/OFF
Logic output	high level output voltage > 2.4 V low level output voltage < 0.4 V
Connections	MIC IN: XLR-3F MIC OUT: XLR-3M SWITCH: XLR-5F 3x terminal
Weight	approx. 212 g
Dimensions (W x H x D)	approx. 150 x 44 x 44 mm
Temperature	operation: -10 °C (14 °F) to +50 °C (122°F) storage: -25 °C (-13°F) to +70 °C (158°F)
MAS 1 microphone button	

MAS 1
12 V (max. 1.5 mA)
signal light ring: 3 mA
XLR-5M
approx. 59 g
total height: approx. 81 mm
installation height: approx. 8 mm
Ø-head of microphone button: approx. 29 mm
Ø-threaded bolt: approx. 20 mm
Ø-rubber rings: approx. 23 mm
thread size: M20 x 1.5
operation: -10 °C (14 °F) to +50 °C (122°F) storage: -25 °C (-13°F) to +70 °C (158°F)

Temperature

Current consumption1.9 mASlide switch for setting the behavior of the microphone button Logic input–Logic output–ConnectorMIC IN: XLR-3F MIC OUT: XLR-3MPower supply Weight Dimensions (W x H x D) TemperatureMIC IN: 200 gShock mount/table mountsMIZS 31	low level output LR-3F	TT ON/OFF voltage > 2.0 V voltage > 0.8 V voltage > 2.4 V		
Slide switch for setting the behavior of the microphone button Logic input – Logic output – Connector MIC IN: XLR-3F MIC IN: MIC OUT: XLR-3M M	ON PTM P high level input low level input nigh level output low level output LR-3F	TT ON/OFF voltage > 2.0 V voltage > 0.8 V voltage > 2.4 V voltage > 0.4 V		
behavior of the microphone button Logic input-Logic output-ConnectorMIC IN: XLR-3F MIC OUT: XLR-3MPower supply Weightapprox. 1200 gDimensions (W x H x D)120 mm xTemperatureoperation: -10 °C storage: -25 °C (-Shock mount/table mountsMZS 31	high level input low level input high level output low level output LR-3F	voltage > 2.0 V voltage > 0.8 V voltage > 2.4 V voltage > 0.4 V		
Logic output – Connector Power supply Weight Dimensions (W x H x D) Temperature Shock mount/table mounts MIC IN: XLR-3F MIC IN: XLR-3F MIC IN: XLR-3F MIC IN: XLR-3G MIC IN: XLR-3G MIC IN: XLR-3F MIC OUT 3 x term approx. 1200 g Dimensions (W x H x D) Temperature Shock mount/table mounts MZS 31	low level input v nigh level output low level output LR-3F	voltage > 0.8 V : voltage > 2.4 V voltage > 0.4 V		
Connector MIC IN: XLR-3F MIC IN: XLR-3F Power supply MIC OUT: XLR-3M MIC OUT Power supply approx. 1200 g 120 mm x Dimensions (W x H x D) 120 mm x operation: -10 °C Temperature operation: -25 °C (- Image: -25 °C (- Shock mount/table mounts MZS 31 Image: -25 °C	low level output LR-3F	voltage > 0.4 V		
MIC OUT: XLR-3M MIC OUT: 3 x term Power supply approx. 1200 g Dimensions (W x H x D) 120 mm x Temperature operation: -10 °C Shock mount/table mounts MZS 31		MIC IN: XI R-5F		
Weight approx. 1200 g Dimensions (W x H x D) 120 mm x Temperature operation: -10 °C Shock mount/table mounts MZS 31		MIC OUT: XLR-3M 3 x terminal		
Dimensions (W x H x D) 120 mm x Temperature operation: -10 °C storage: -25 °C (- Image: MZS 31	48 V phantom power (P 48)			
Temperature operation: -10 °C storage: -25 °C (- MZS 31 Shock mount/table mounts MZS 31	approx. 1206 g			
storage: –25 °C (- MZS 31 Shock mount/table mounts MZS 31	20 mm x 43 mm x 170 mm			
Shock mount/table mounts MZS 31	operation: –10 °C (14 °F) to +50 °C (122°F) storage: –25 °C (–13°F) to +70 °C (158°F)			
	MZT 30	MZT 30-L		
Connector –	MZT 30	MZT 30-L		
	XLR-3F	XLR-5F		
Power supply 48 V phan	48 V phantom power (P 48)			
Weight approx. 1200 g		approx. 1206 g		
Dimensions (W x H x D) 120 mm x	approx.	120 mm x 43 mm x 170 mm		
Temperatureoperation: -10 °Cstorage: -25 °C (-	approx.	C (100°E)		

MZC 30 connection cable for ceiling mounting

	MZC 30
Connections	XLR-3M special coax socket for ME 3x
Power supply	12 – 48 V phantom power (P 12 – P 48)
Length	9 m
Diameter	Ø 1.1 mm

In compliance with

Europe

i

CE

EMC:

• EN 55103-1

 \bigcirc

• EN 55103-2

In case of interference from extraneous devices, the specifications may differ from those listed above.

Pin assignment


MEB 102 | MEB 104: XLR-3





1 Ground 2 Microphone + 3 Microphone –


MEG 14-40 | MZH 30xx: XLR-3

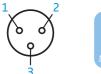



1 Ground 2 Microphone + 3 Microphone –

MEG 14-40-L-II: XLR 5

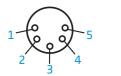

1 Microphone Ground 2 Microphone + 3 Microphone – 4 LED Ground 5 LED: 12 – 30 V


MAS 133: XLR 3 mic in



1 Ground 2 Microphone + 3 Microphone –

MEB 102-L | MEB 104-L: XLR-5



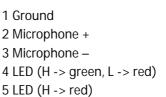

MEG 14-40-L | MZH 30xx-L: XLR-5



1 Ground 2 Microphone + 3 Microphone – 4 LED: 9 – 30 V DC any polarity 5 LED: 9 – 30 V DC any polarity

MEB 114: XLR 3




1 Ground 2 Microphone + 3 Microphone –


MAS 133: XLR 3 mic out




1 Microphone – 2 Microphone + 3 Ground

MAS 1: XLR 3 mic in

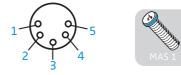

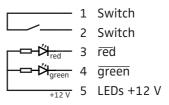



MAS 133: XLR 5 switch

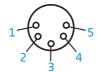

1 Ground 2 Switch 3 LED red – 4 LED green – 5 LEDs +12 V

Polar diagrams

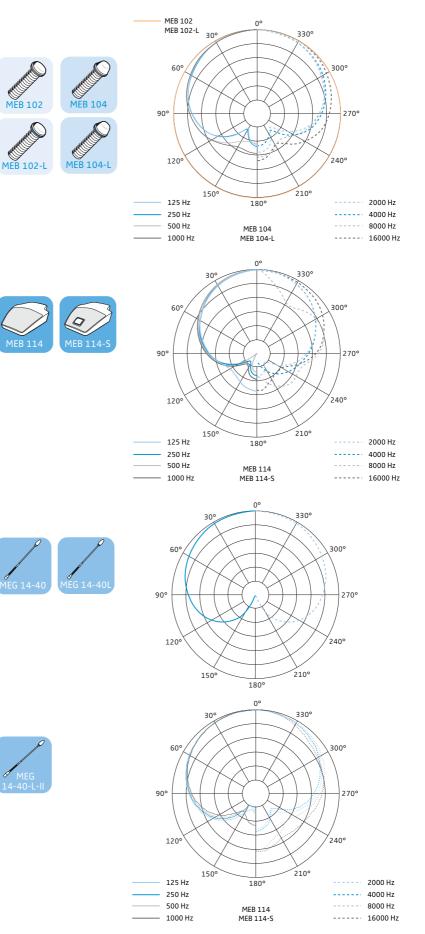


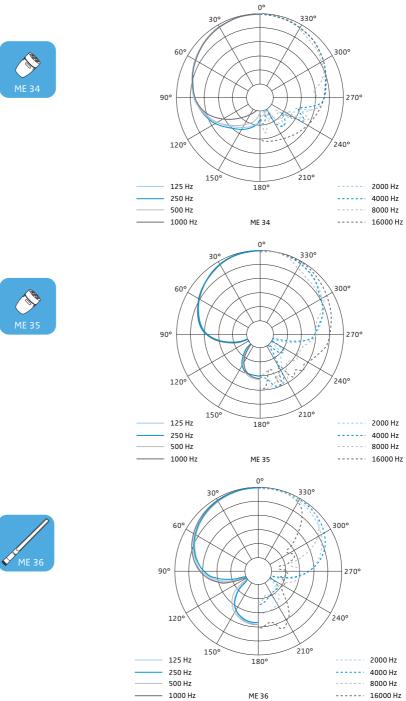



dB -20 102 -30 -40 -50 MEB 102-L -60 0 ° -70 -• 90 ° 100 Hz 200 Hz 500 Hz 1 kHz 2 kHz 5 kHz 10 kHz 20 kHz dB -20 ÉB 104 -30 -40 -50 B 104-I -60 0 ° -70 • 90 ° 100 Hz 200 Hz 10 kHz 20 kHz 500 Hz 1 kHz 2 kHz 5 kHz dB -30 -40 -50 -60 -70 -80 0 ° -90 • 90 ° 100 Hz 200 Hz 500 Hz 1 kHz 2 kHz 5 kHz 10 kHz 20 kHz dB -20 9 IEG 14-40 -30 -40 -50 -60 0 ° -70 -• 00 ° 100 Hz 200 Hz 500 Hz 1 kHz 2 kHz 5 kHz 10 kHz 20 kHz

Frequency response curves

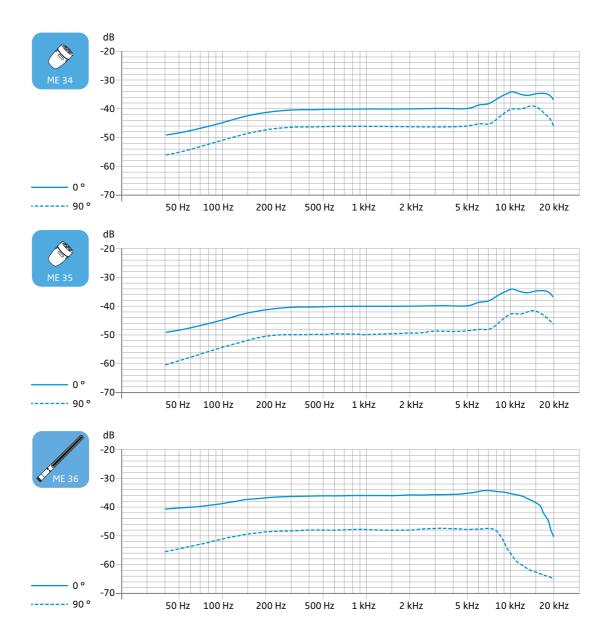

Manufacturer Declarations

Warranty

Sennheiser electronic GmbH & Co. KG gives a warranty of 24 months on this product.

In compliance with the following requirements

- X
- WEEE Directive (2012/19/EU) Please dispose of the products at the end of their operational lifetime by taking them to your local collection point or recycling center for such equipment.



CE

Australia/New Zealand

CE Conformity

- RoHS Directive (2011/65/EU)
- EMC Directive (2014/30/EU)



Publ. 02/15, 554665, A04