

INVOLIGHT

DMX LED Istrobe, 18*1W



LEDSTROB18

USER MANUAL

DMX LED Istrobe,18*1W

Our DMX LED istrobe offers many possibilities to achieve the effects which you want. It is for DJs, bands, nightclubs and other performers who want a complete LED wash light system. Please read the manual before operation.

Power Input: 100V AC~240V AC,50Hz/60 ;

LEDs: 1W*18, cool white

Consumption: 25W

DMX Channel: 3CHs

Four working modes:

- ✧ Sound active mode
- ✧ M/S mode
- ✧ DMX mode
- ✧ Dimming mode

I , Sound active mode

- 1 , Press MODE button to enter into sound active mode “SE.x”.
- 2 , Press UP or DOWN button to adjust the sensitivity of sound control “SE.0 ~ SE.9”.
- 3 , Potentionmeter could be used to adjust the sound active sensitivity ,clockwise rotation could wake the hight sensitivity ,and contrarotate to low sensitivity.

II,M/S mode

- 1 , Press MODE button to enter into M/S mode “SLA”.

III,DMX 模式 DMX mode

- 1 , Press MODE button to enter into DMX mode “d--.”.
- 2 , Press SETUP button to enter into DMX address setting condition“xxx.”.
- 3 , Press UP or DOWN button to set DMX address “001. ~ 512.”.

DMX mode control table

CH1	CH2	CH3	FUNCTION
-----	-----	-----	----------

Dim 0-255	Flash 0-255	0-9	Dim & Flash
No use		Sensitivity 10-255	Sound

IV, Dimming mode

- 1 , Press MODE button to enter into dimming condition "CON".
- 2 , Press SETUP button to enter into brightness control condition "xxx".
- 3 , Press UP or DOWN button to adjust brightness "000~255".
- 4 , Press SETUP button to enter into strobe speed's adjustment condition "F.xx".
- 5 , Press UP or DOWN button to adjust the strobe speed "F.00 ~ F.30".

INVOLIGHT