


PIXEL.2

CHANNEL	VALUE	FUNCTION
		PRESET COLOR
	0 ⇄ 10	NO FUNCTION
	11 ⇄ 20	L106
	21 ⇄ 30	R05
	31 ⇄ 40	L194
	41 ⇄ 50	R54
	51 ⇄ 60	L019
	61 ⇄ 70	R08
17	71 ⇄ 80	R89
	81 ⇄ 90	R86
	91 ⇄ 100	L213
	101 ⇄ 110	R377
	111 ⇄ 120	R80
	121 ⇄ 130	L202
	131 ⇄ 140	L328
	141 ⇄ 150	R3314
	151 ⇄ 160	L101
	161 ⇄ 170	L768
	171 ⇄ 255	NO FUNCTION

ULTI cyc

USER MANUAL

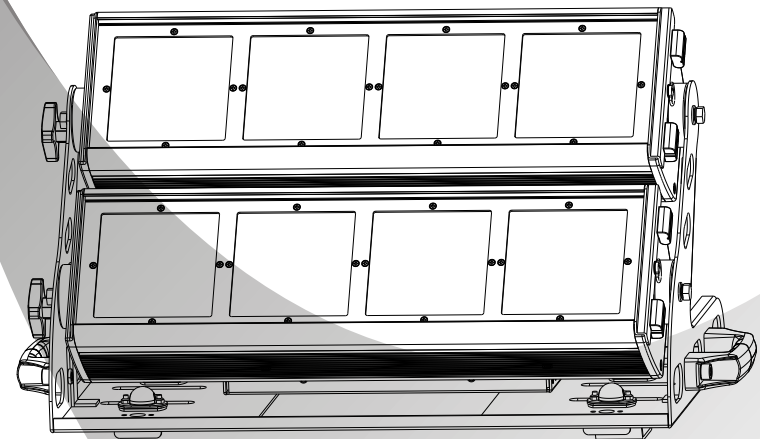

SS819

SILVER STAR
Professional Lighting

www.yajiang.cn




RD-SS819-SM-00(SS-I)

MODELS:SS819XAL

1 PRODUCT SPECIFICATIONS

1.1 PRODUCT SPECIFICATIONS

- ◆ Voltage: AC100~240V, 50/60Hz
- ◆ Max Power: 340W
- ◆ Size: 622x310x299mm
- ◆ Weight: 15kg

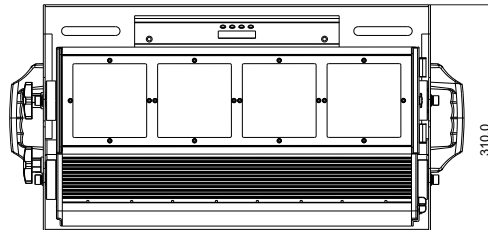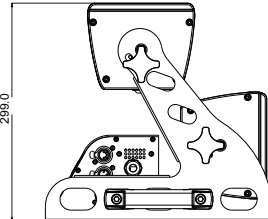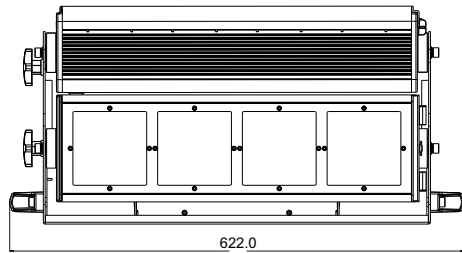

PIXEL.2

CHANNEL	VALUE	FUNCTION
1	0 ↔ 255	DIMMER
2	0 ↔ 255	RED1
3	0 ↔ 255	GREEN1
4	0 ↔ 255	BLUE1
5	0 ↔ 255	LIEM1
6	0 ↔ 255	AMBER1
7	0 ↔ 255	CYAN 1
8	0 ↔ 255	DEEP BLUE 1
9		PRESET COLOR
	0 ↔ 10	NO FUNCTION
	11 ↔ 20	L106
	21 ↔ 30	R05
	31 ↔ 40	L194
	41 ↔ 50	R54
	51 ↔ 60	L019
	61 ↔ 70	R08
	71 ↔ 80	R89
	81 ↔ 90	R86
	91 ↔ 100	L213
	101 ↔ 110	R377
	111 ↔ 120	R80
	121 ↔ 130	L202
	131 ↔ 140	L328
141 ↔ 150	R3314	
151 ↔ 160	L101	
161 ↔ 170	L768	
171 ↔ 255	NO FUNCTION	
10	0 ↔ 255	RED2
11	0 ↔ 255	GREEN2
12	0 ↔ 255	BLUE2
13	0 ↔ 255	LIEM2
14	0 ↔ 255	AMBER2
15	0 ↔ 255	CYAN2
16	0 ↔ 255	DEEP BLUE2

PIXEL.1

CHANNEL	VALUE	FUNCTION
1	0 ↔ 255	DIMMER
2	0 ↔ 255	RED1
3	0 ↔ 255	GREEN1
4	0 ↔ 255	BLUE1
5		PRESET COLOR
	0 ↔ 10	NO FUNCTION
	11 ↔ 20	L106
	21 ↔ 30	R05
	31 ↔ 40	L194
	41 ↔ 50	R54
	51 ↔ 60	L019
	61 ↔ 70	R08
	71 ↔ 80	R89
	81 ↔ 90	R86
	91 ↔ 100	L213
	101 ↔ 110	R377
	111 ↔ 120	R80
	121 ↔ 130	L202
	131 ↔ 140	L328
	141 ↔ 150	R3314
	151 ↔ 160	L101
161 ↔ 170	L768	
171 ↔ 255	NO FUNCTION	
6	0 ↔ 255	RED2
7	0 ↔ 255	GREEN2
8	0 ↔ 255	BLUE2
9		PRESET COLOR
	0 ↔ 10	NO FUNCTION
	11 ↔ 20	L106
	21 ↔ 30	R05
	31 ↔ 40	L194
	41 ↔ 50	R54
	51 ↔ 60	L019
	61 ↔ 70	R08
	71 ↔ 80	R89
	81 ↔ 90	R86
	91 ↔ 100	L213
	101 ↔ 110	R377
	111 ↔ 120	R80
	121 ↔ 130	L202
	131 ↔ 140	L328
	141 ↔ 150	R3314
	151 ↔ 160	L101
161 ↔ 170	L768	
171 ↔ 255	NO FUNCTION	

1.2 SAFETY WARNING

IMPORTANT:


- This product must be installed by a qualified professional.
- All maintenance must be carried out by a qualified electrician.
- A minimum distance of 0.5m must be maintained between the equipment and a combustible surface.
- The product must always be operated in a well ventilated area.
- DO NOT stare directly into the LED light source.
- Always disconnect the power before carrying out any maintenance.
- The earth must always be connected to the ground.
- Ensure that all parts of the equipment are kept clean and free of dust.

2 INSTALLATION

2.1 MOUNTING

HANGING

The LED fixture can be mounted in a hanging position using the supporting bracket. The bracket should be secured to the mounting truss or structure using a standard mounting clamp. Please note that when hanging the unit a safety cable should also be used.

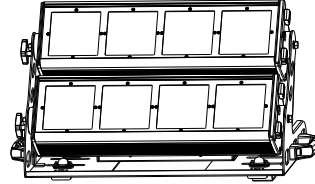

The LED MODULE can be mounted at any angle and in any position. It is possible to further adjust the angle of the LED MODULE using the two adjustment knobs located on the side of the fixture.

2.2 POWER CONNECTIONS

- 220~240V: 6 units may be connected in series
- 110~120V: 3 units may be connected in series

Note:

If the signal cable is over 60m between the DMX512 controller and fixture or between two fixtures, then a DMX signal amplifier is needed as well.


CHANNEL	VALUE	FUNCTION
		AUTO
	0 ⇄ 40	NO FUNCTION
	41 ⇄ 50	ATUO1
	51 ⇄ 60	ATUO2
	61 ⇄ 70	ATUO3
	71 ⇄ 80	ATUO4
	81 ⇄ 90	ATUO5
	91 ⇄ 100	ATUO6
	101 ⇄ 110	ATUO7
	111 ⇄ 120	ATUO8
	121 ⇄ 130	ATUO9
20	131 ⇄ 140	ATUO10
	141 ⇄ 150	PROGRAM1
	151 ⇄ 160	PROGRAM2
	161 ⇄ 170	PROGRAM3
	171 ⇄ 180	PROGRAM4
	181 ⇄ 190	PROGRAM5
	191 ⇄ 200	PROGRAM6
	201 ⇄ 210	PROGRAM7
	211 ⇄ 220	PROGRAM8
	221 ⇄ 230	PROGRAM9
	231 ⇄ 255	PROGRAM10
21	0 ⇄ 255	AUTO SPEED ADJUSTMENT
		DIMMER SPEED
	0 ⇄ 9	PRESET DIMMER SPEED FROM DISPLAY MENU
	10 ⇄ 29	OFF
22	30 ⇄ 69	DIM1
	70 ⇄ 129	DIM2
	130 ⇄ 189	DIM3
	190 ⇄ 255	DIM4

CHANNEL	VALUE	FUNCTION
		COLOR MARCOS
	0 ↔ 10	NO FUNCTION
	11 ↔ 30	RED 100% /GREEN UP /BLUE 0%
	31 ↔ 50	RED DOWN /GREEN 100% /BLUE 0%
	51 ↔ 70	RED 0% /GREEN 100% /BLUE UP
	71 ↔ 90	RED 0% /GREEN DOWN /BLUE 100%
	91 ↔ 110	RED UP /GREEN 0% /BLUE 100%
	111 ↔ 130	RED 100% /GREEN 0% /BLUE DOWN
	131 ↔ 150	RED 100% /GREEN UP /BLUE UP
	151 ↔ 170	RED DOWN /GREEN DOWN /BLUE 100%
	171 ↔ 195	ALL LEDS AT FULL OUTPUT
18	196 ↔ 200	2700K
	201 ↔ 205	3000K
	206 ↔ 210	3200K
	211 ↔ 215	3500K
	216 ↔ 220	4000K
	221 ↔ 225	4200K
	226 ↔ 230	4500K
	231 ↔ 235	5600K
	236 ↔ 240	6000K
	241 ↔ 245	6500K
	246 ↔ 250	7200K
	251 ↔ 255	8000K
		STROBE
19	0 ↔ 9	NO FUNCTION
	10 ↔ 99	STROBE FROM (SLOW TO FAST , 0-25Hz)
	100 ↔ 109	NO FUNCTION
	110 ↔ 179	LIGHTNING STROBE
	180 ↔ 189	NO FUNCTION
	190 ↔ 255	RANDOM STROBE


3 DISPLAY PANEL OPERATION


3.1 DISPLAY OPERATION

- ◆ MENU: BACK;
- ◆ ENTER: ENTER OR SAVE;
- ◆ DOWN: DOWN;
- ◆ UP: UP;

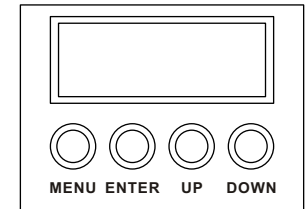

3.2 MENU MAP

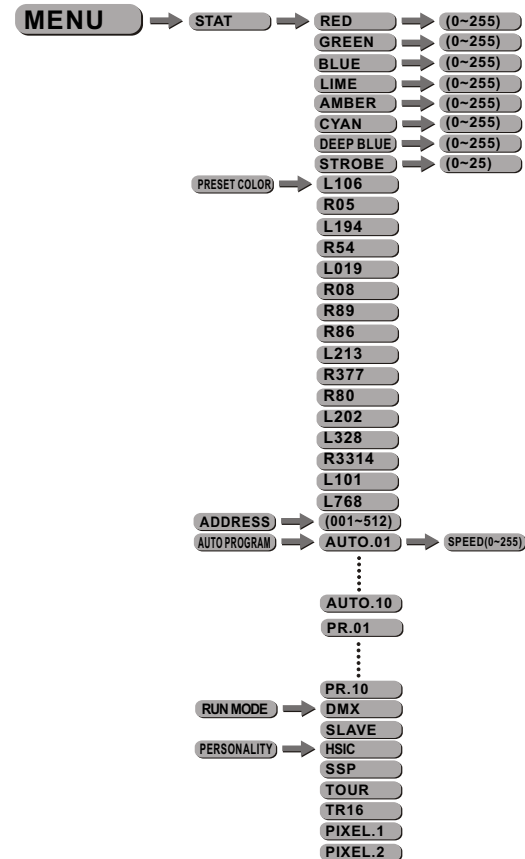

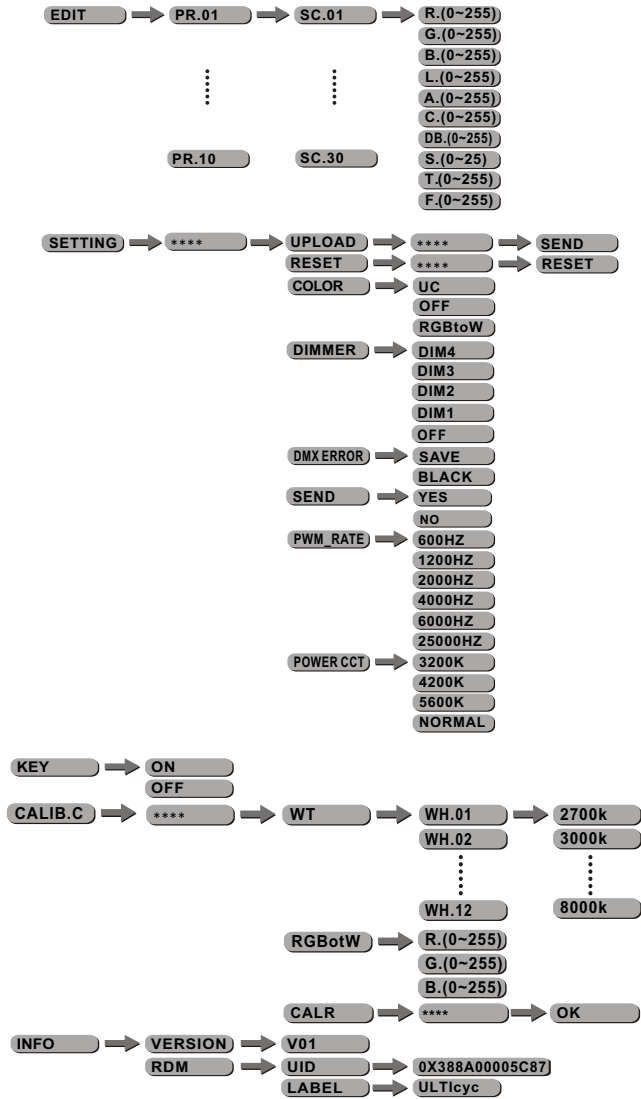


TR16

CHANNEL	VALUE	FUNCTION
1	0 ↔ 255	MASTER DIMMER
2	0 ↔ 255	MASTER DIMMER FINE
3	0 ↔ 255	RED
4	0 ↔ 255	RED FINE
5	0 ↔ 255	GREEN
6	0 ↔ 255	GREEN FINE
7	0 ↔ 255	BLUE
8	0 ↔ 255	BLUE FINE
9	0 ↔ 255	LIME
10	0 ↔ 255	LIME FINE
11	0 ↔ 255	AMBER
12	0 ↔ 255	AMBER FINE
13	0 ↔ 255	CYAN
14	0 ↔ 255	CYAN LIME
15	0 ↔ 255	DEEP BLUE
16	0 ↔ 255	DEEP BLUE FINE
		PRESET COLOR
	0 ↔ 10	NO FUNCTION
11 ↔ 20		L106
21 ↔ 30		R05
31 ↔ 40		L194
41 ↔ 50		R54
51 ↔ 60		L019
61 ↔ 70		R08
71 ↔ 80		R89
81 ↔ 90		R86
91 ↔ 100		L213
101 ↔ 110		R377
111 ↔ 120		R80
121 ↔ 130		L202
131 ↔ 140		L328
141 ↔ 150		R3314
151 ↔ 160		L101
161 ↔ 170		L768
171 ↔ 255		NO FUNCTION

17


CHANNEL	VALUE	FUNCTION
11	216 ↔ 220	4000K
	221 ↔ 225	4200K
	226 ↔ 230	4500K
	231 ↔ 235	5600K
	236 ↔ 240	6000K
	241 ↔ 245	6500K
	246 ↔ 250	7200K
	251 ↔ 255	8000K
12		STROBE
	0 ↔ 9	NO FUNCTION
	10 ↔ 99	STROBE FROM (SLOW TO FAST, 0-25Hz)
	100 ↔ 109	NO FUNCTION
	110 ↔ 179	LIGHTNING STROBE
	180 ↔ 189	NO FUNCTION
190 ↔ 255	RANDOM SROBE	
13		AUTO
	0 ↔ 40	NO FUNCTION
	41 ↔ 50	ATUO1
	51 ↔ 60	ATUO2
	61 ↔ 70	ATUO3
	71 ↔ 80	ATUO4
	81 ↔ 90	ATUO5
	91 ↔ 100	ATUO6
	101 ↔ 110	ATUO7
	111 ↔ 120	ATUO8
	121 ↔ 130	ATUO9
	131 ↔ 140	ATUO10
	141 ↔ 150	PROGRAM1
	151 ↔ 160	PROGRAM2
	161 ↔ 170	PROGRAM3
	171 ↔ 180	PROGRAM4
	181 ↔ 190	PROGRAM5
	191 ↔ 200	PROGRAM6
	201 ↔ 210	PROGRAM7
	211 ↔ 220	PROGRAM8
	221 ↔ 230	PROGRAM9
231 ↔ 255	PROGRAM10	
14	0 ↔ 255	AUTO SPEED ADJUSTMENT
		DIMMER SPEED
15	0 ↔ 9	PRESET DIMMER SPEED FROM DISPLAYMENU
	10 ↔ 29	OFF
	30 ↔ 69	DIM1
	70 ↔ 129	DIM2
	130 ↔ 189	DIM3
	190 ↔ 255	DIM4

3.3 EDIT STATIC COLOUR

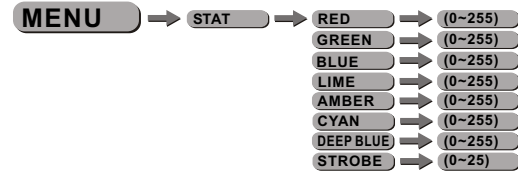

- Combine **【RED】**, **【GREEN】**, **【BLUE】**, **【LIME】**, **【AMBER】**, **【CYAN】** and **【DEEP BLUE】** to create an infinite range of colors (0-255)
- Set the value of the **【STROBE】** (0-25Hz)

3.4 MIX-COLOR SETTING

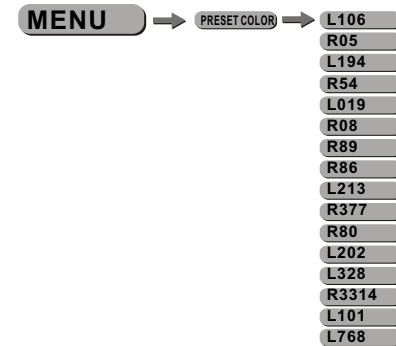


- Select **【ENTER】** UP\DOMN from the **【PRESET WHEEL】** menu to choose different color mixture

3.5 DMX512 SETTINGS



- Enter the **【ADDRESS】** mode to set the DMX ADDRESS.

3.6 ACTIVATING AUTO PROGRAMS

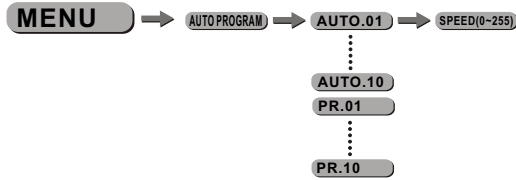


- Select the target **【AUTO PROGRAM】** program and press **【ENTER】** .
- Programs **【AUTO.01】** to **【AUTO.10】** are fully pre-programmed and will not be altered by changes in **【EDIT】** mode.
- Programs **【PR.01】** to **【PR.10】** are fully pre-programmed and can be edited in **【EDIT】** mode.

3.7 RUN MODE




- Enter the **【RUN MODE】** mode to set working mode.
- **【DMX】** mode is for using the DMX512 controller to control the fixtures.
- **【SLAVE】** mode is for Master -- Slave operation.

3.8 PERSONALITY

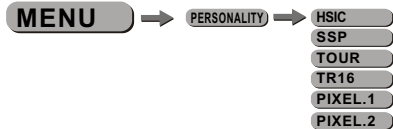

- Enter the **【PERSONALITY】** mode to select DMX mode: **【HSIC】** , **【SSP】** , **【TOUR】** , **【TR16】** , **【PIXEL.1】** , **【PIXEL.2】** .

3.9 EDITING CUSTOM PROGRAMS

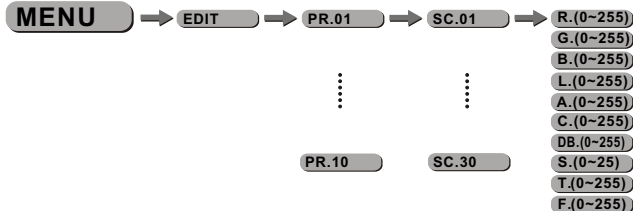


- Enter the **【EDIT】** mode to edit the custom programs **【PR.01】** to **【PR.10】** .
- Each custom program has 30 steps that can be edited.
- Each step allows the creation of a scene using **【RED】** , **【GREEN】** , **【BLUE】** , **【LIME】** , **【AMBER】** , **【CYAN】** , **【DEEP BLUE】** **【STRB】** , **【TIME】** & **【FADE】** .

TOUR		
CHANNEL	VALUE	FUNCTION
1	0 ↔ 255	MASTER DIMMER
2	0 ↔ 255	RED
3	0 ↔ 255	GREEN
4	0 ↔ 255	BLUE
5	0 ↔ 255	LIME
6	0 ↔ 255	AMBER
7	0 ↔ 255	CYAN
8	0 ↔ 255	DEEP BLUE
		PRESET COLOR
	0 ↔ 10	NO FUNCTION
	11 ↔ 20	L106
	21 ↔ 30	R05
	31 ↔ 40	L194
	41 ↔ 50	R54
	51 ↔ 60	L019
	61 ↔ 70	R08
9	71 ↔ 80	R89
	81 ↔ 90	R86
	91 ↔ 100	L213
	101 ↔ 110	R377
	111 ↔ 120	R80
	121 ↔ 130	L202
	131 ↔ 140	L328
	141 ↔ 150	R3314
	151 ↔ 160	L101
	161 ↔ 170	L768
	171 ↔ 255	NO FUNCTION
		COLOR MARCOS
	0 ↔ 10	NO FUNCTION
	11 ↔ 30	RED 100% /GREEN UP /BLUE 0%
	31 ↔ 50	RED DOWN /GREEN 100% /BLUE 0%
	51 ↔ 70	RED 0% /GREEN 100% /BLUE UP
	71 ↔ 90	RED 0% /GREEN DOWN /BLUE 100%
	91 ↔ 110	RED UP /GREEN 0% /BLUE 100%
	111 ↔ 130	RED 100% /GREEN 0% /BLUEDOWN
10	131 ↔ 150	RED 100% /GREEN UP /BLUE UP
	151 ↔ 170	RED DOWN /GREEN DOWN /BLUE 100%
	171 ↔ 195	ALL LEDSAT FULLOUTPUT
	196 ↔ 200	2700K
	2101 ↔ 205	3000K
	206 ↔ 210	3200K
	211 ↔ 215	3500K

SSP		
CHANNEL	VALUE	FUNCTION
1	0 ↔ 255	MASTER DIMMER
2	0 ↔ 255	RED
3	0 ↔ 255	GREEN
4	0 ↔ 255	BLUE
5	0 ↔ 255	LIME
6	0 ↔ 255	AMBER
7	0 ↔ 255	CYAN
8	0 ↔ 255	DEEP BLUE
		PRESET COLOR
	0 ↔ 10	NO FUNCTION
	11 ↔ 20	L106
	21 ↔ 30	R05
	31 ↔ 40	L194
	41 ↔ 50	R54
	51 ↔ 60	L019
	61 ↔ 70	R08
9	71 ↔ 80	R89
	81 ↔ 90	R86
	91 ↔ 100	L213
	101 ↔ 110	R377
	111 ↔ 120	R80
	121 ↔ 130	L202
	131 ↔ 140	L328
	141 ↔ 150	R3314
	151 ↔ 160	L101
	161 ↔ 170	L768
	171 ↔ 255	NO FUNCTION
		STROBE
	0 ↔ 9	NO FUNCTION
10	10 ↔ 99	STROBE FROM (SLOW TO FAST , 0-25Hz)
	100 ↔ 109	NO FUNCTION
	110 ↔ 179	LIGHTNING STROBE
	180 ↔ 189	NO FUNCTION
	190 ↔ 255	RANDOM SROBE
		DIMMER SPEED
	0 ↔ 9	PRESET DIMMER SPEEDFROM DISPLAYMENU
11	10 ↔ 29	OFF
	30 ↔ 69	DIM1
	70 ↔ 129	DIM2
	130 ↔ 189	DIM3
	190 ↔ 255	DIM4

3.10 SPECIAL SETTINGS

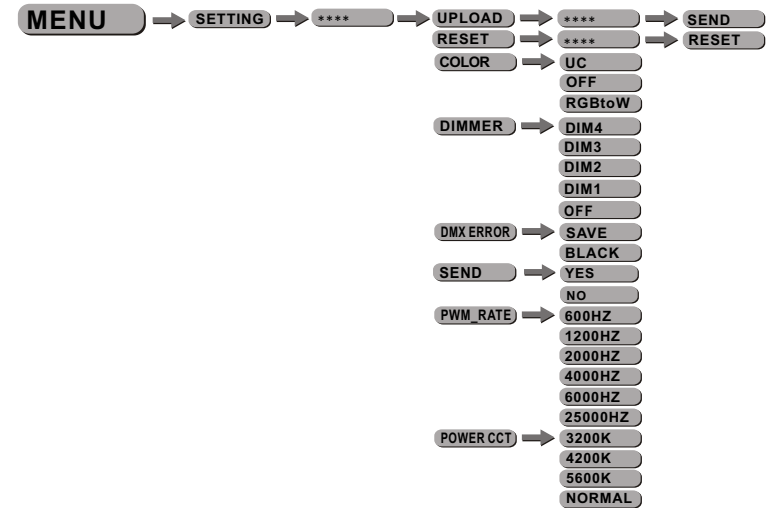

- [SETTING]...this menu allows the user to adjust key operation settings for this fixture.
- Select [UPLOAD] to upload the custom programs from the current MASTER unit to the SLAVE units.
- In order to reset custom modes to default values select [RESET] .
Note: [UC][RGBW][CALIB.C] can't reset
- [COLOR] is for activate/unactivate the color calibration functions. When [RGBW] is selected, on RGB = 255,255,255, the color is displayed as calibrated in CALIB.C --RGBW. When [COLOR] is set [OFF] , on RGB = 255,255,255, the RGB values are not adjusted and the output is most powerful. When [UC] is selected, the RGB output are adjusted to a standard preset universal color which balances fixtures from different generations.
Note: [COLOR] work only when choose [NORMAL] at [FULL POWER CCT]
- Select [DIM1], [DIM2], [DIM3] or [DIM4] for different dimming speeds. ([DIM4] is the slowest dimming speed)
- [DMX ERROR] Choose [SAVE] in order to save the last DMX data in case of DMX signal error. Choose [BLACK] in order to blackout in case of DMX signal error.
- [SEND]...this function allows the user to select whether the fixture will send DMX data to other fixtures during stand-alone operation. The [YES] setting allows data to be sent to other fixtures. The [NO] setting is default and will not send DMX data to other fixtures.
- <PWM_RATE> is PWM refresh rate bottom, press UP/DOWN to choose <600Hz>, <1200Hz>, <2000Hz>, <4000Hz>, <6000Hz>, <25000Hz>
Note: with refresh rate increased, gray rate of dimmer will be reduced, (that's means high refresh rate, low gray rate), when it's <4000Hz>, CV3 is invalid, when it's <25000Hz>, CV1 CV2 CV3 are invalid, so please lower PWM rate to increase gray rate in necessary.
- <FULL POWER CCT> is the color temperature choose bottom, press UP/DOWN to choose, under full power, <3200K>, <4200K>, <5600K> can be chosen, when choose <COLOR>, <3200K>, <4200K>, <5600K> are not work, but choose <NORMAL>.

3.11 ACTIVATE THE PASSWORD




- Enter the **【KEY】** mode to select whether the access password is on or off.
- When the fixture is set as PASS **【ON】** , after 30 seconds or turn on the fixture next time, the fixture will need an access password to enter the display menu control.

Note: The factory access password is **【UP】 + 【DOWN】 + 【UP】 + 【DOWN】** , then press **【ENTER】** to confirm the access.

3.12 BALANCE PARAMETERS AND CORRECTION MENU DISPLAY

Press **【MENU】** button to enter the password confirmation, to enter the correct password <UP + DOWN + UP + DOWN > Key, press the **【MENU】** in, the correct password will enter show submenu

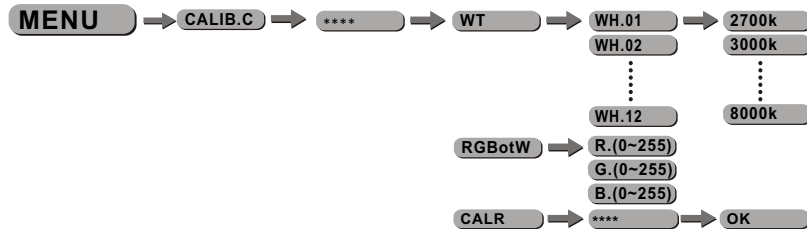

- Enter the **【CALIB.C】** to select white color of different color temperature.
- There are 12 pre-programmed White colors can be edited by using **【RED】** , **【GREEN】** , **【BLUE】** , **【AMBER】** . & **【LIME】** .
- Enter the **【RGBtoW】** to adjust the RGB parameter to make different whites.
- When the new setting is activated, the DMX controller choose RGB = 255,255,255 the white color will be made by the actual RGB values on the **【RGBtoW】** .

3.13 INFO



- Press **【ENTER】** and go to **【INFO】** ,you can check **【VERSION】** , press **【DOWN】 / 【UP】** to check **【RDM】** , **【LABEL】** , press **【MENU】** and back.

4 USING A DMX512 CONTROLLER

4.1 CHANNEL ASSIGNMENT

- Note: This product have four DMX512 channel configuration: **【HSIC】** , **【SSP】** , **【TOUR】** , **【TR16】** , **【PIXEL.1】** , **【PIXEL.2】** ,

HSIC		
CHANNEL	VALUE	FUNCTION
1	0 ↔ 255	INTENSITY
2	0 ↔ 255	HUE
3	0 ↔ 255	HUE FINE
4	0 ↔ 255	SATURATION
5		CCT
	0 ↔ 10	NO FUNCTION
	11 ↔ 30	2700K
	31 ↔ 50	3000K
	51 ↔ 70	3200K
	71 ↔ 90	3500K
	91 ↔ 110	4000K
	111 ↔ 130	4200K
	131 ↔ 150	4500K
	151 ↔ 170	5600K
	171 ↔ 190	6000K
	191 ↔ 210	6500K
211 ↔ 230	7200K	
231 ↔ 255	8000K	
6		STROBE
	0 ↔ 9	NO FUNCTION
	10 ↔ 99	STROBE FROM (SLOW TO FAST, 0-25Hz)
	100 ↔ 109	NO FUNCTION
	110 ↔ 179	LIGHTNING STROBE
	180 ↔ 189	NO FUNCTION
190 ↔ 255	RANDOM SROBE	
7		DIMMER SPEED
	0 ↔ 9	PRESET DIMMER SPEED FROM DISPLAY MENU
	10 ↔ 29	OFF
	30 ↔ 69	DIM1
	70 ↔ 129	DIM2
	130 ↔ 189	DIM3
190 ↔ 255	DIM4	